


Gerber Mini GPS Back Tracker

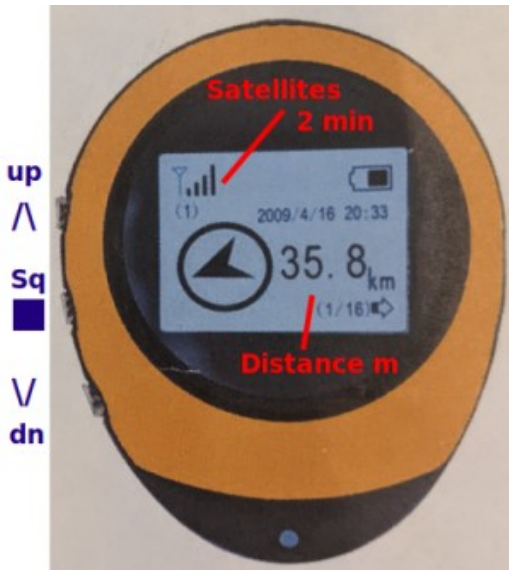

- > Press **sq** in until display lights up
- > Wait 2 minutes for > 2 bars/**satellites**
- > Press **sq** and **dn** together to clear previous location / time (if needed).
- > Press **sq** and **up** together for new location (date displayed). If no time or menu stuff, reset by holding **sq** in, until display blanks (reset the unit).
- > Distance will increase as you move.
- > Hold in **sq** to switch off/ reset
- > Recharge (USB) when battery low